EE4601
Communication Systems

Week 1

Introduction to Digital Communications

Channel Capacity

[0]©2015, Georgia Institute of Technology (lect1_1)

Contact Information

- Office: Centergy 5138
- Phone: 404 894 2923
- Fax: 404 894 7883
- Email: stuber@ece.gatech.edu (the best way to contact me)
- Web: http://www.ece.gatech.edu/users/stuber/4601
- Office Hours: Wednesdays 2-4pm
- Teaching Assistant & Office Hours: TBA

[0]©2013, Georgia Institute of Technology (lect1_2)

Introduction

Digital communications is the exchange of information using a *finite* set of signal waveforms. This is in contrast to *analog communication* (e.g., AM/FM radio) which do not use a finite set of signal waveforms.
Why use digital communications?

- Natural choice for digital sources, e.g., computer communications.
- Source encoding or data compression techniques can reduce the required transmission bandwidth with a controlled amount of message distortion.
- Digital signals are more robust to channel impairments than analog signals.
  - noise, co-channel and adjacent channel interference, multipath-fading.
  - surface defects in recording media such as optical and magnetic disks.
- Higher bandwidth efficiency and spectral efficiency than analog signals.
- Data encryption and multiplexing is easier.
- Benefit from using digital signal processing techniques.

[0]©2013, Georgia Institute of Technology (lect1_3)

Hierarchy of Wireless Networks

Concepts learned in this course will be relevant to various types of communication networks. Examples include:

1. Satellite Networks
2. Cellular Land Mobile Radio Networks
3. Fixed Wireless Access and Broadcast Networks
4. Wireless Local and Personal Area Networks
5. Sensor Networks

[0]©2017, Georgia Institute of Technology (lect1_4)

Cellular Technologies

- 0G: Briefcase-size mobile radio telephones (1970s)
- 1G: Analog cellular telephony (1980s)
- 2G: Digital cellular telephony (1990s)
- 3G: High-speed digital cellular telephony, including video telephony (2000s)
- 4G: All-IP-based anytime, anywhere voice, data, and multimedia telephony at faster data rates than 3G (2010s)
- 5G: Gbps wireless using mm-wave small cell technology, massive MIMO, heterogeneous networks. (2020s)










[0]©2016, Georgia Institute of Technology (lect1_5)

Course Objectives

1. Brief review of probability and introduction to random processes.
   - message waveforms, physical channels, noise and interference are all random processes.
2. Mathematical modelling and characterization of physical communication channels, signals and noise.
3. Design of digital waveforms and associated receiver structures for recovering channel-corrupted digital signals.
   - emphasis will be on waveform design, receiver processing, and performance analysis for "additive white Gaussian noise (AWGN) channels."
   - mathematical foundations are essential for effective physical layer modelling, waveform design, receiver design, etc.
   - communication signal processing is a key element of this course. Our focus will be on the "digital baseband" and not "analog RF" or "networking."

[0]©2013, Georgia Institute of Technology (lect1_6)

Basic Digital Communication System

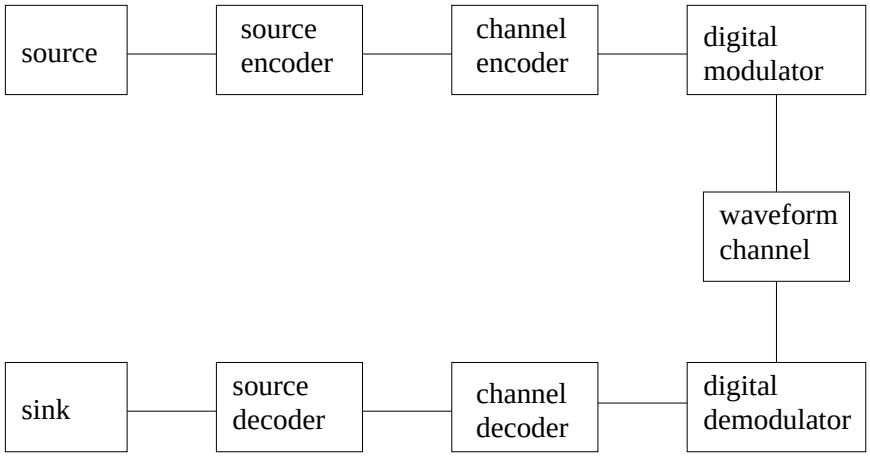

[0]©2013, Georgia Institute of Technology (lect1_7)


Some Types of Waveform Channels


- wireline channels, e.g., twisted copper pair, coaxial cable, residential power line
- fiber optic channels (optical communication is not considered in this course)
- wireless (radio frequency) channels
  - line-of-sight (satellite, land microwave radio)
  - non-line-of-sight (cellular, wireless local, personal and body area networks (LANs, BANs, PANs))
- underwater acoustic channels (submarine communication)
- storage channels, e.g., optical and magnetic disks.
  - communication from the present to the future.

[0]©2013, Georgia Institute of Technology (lect1_8)

Mathematical Channel Models

Additive White Gaussian Noise Channel (AWGN):

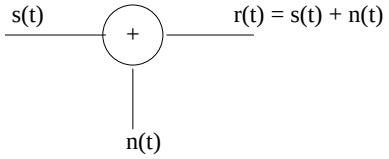

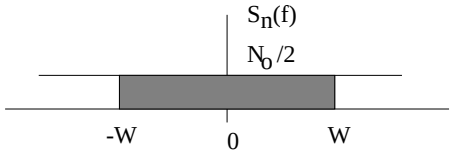

Receiver thermal noise can be modeled as spectrally flat or "white."

Thermal noise power in bandwidth W is

$$\frac{N_o}{2} \cdot 2 \cdot W = N_o W \quad \text{Watts}$$


At any time instant t_0, the noise waveform $n(t_0)$ is a Gaussian random variable with zero mean and variance $N_o W$, $n(t_0) \sim N(0, N_o W)$.

For a given channel input $s(t_0)$, the channel output $r(t_0)$ is also a Gaussian random variable with mean $s(t_0)$ and variance $N_o W$, $r(t_0) \sim N(s(t_0), N_o W)$.

[0]©2013, Georgia Institute of Technology (lect1_9)

Mathematical Channel Models

Linear Filter Channel:

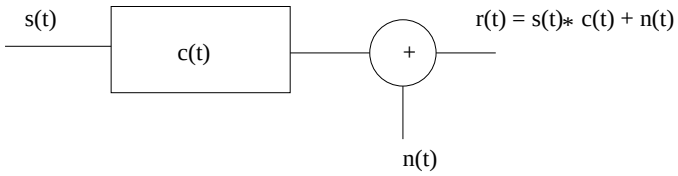

An *ideal channel* has *impulse response* $c(t) = \alpha\delta(t - t_0)$ and, therefore,

$$r(t) = \alpha s(t - t_o) + n(t)$$

An ideal channel only attenuates and delays a signal, but otherwise leaves it undistorted. The channel *transfer function* is

$$C(f) = \mathcal{F}[c(t)] = \alpha e^{-j2\pi f t_o}, \quad |f| < B$$

where B is the system bandwidth.

- The *magnitude response* $|C(f)| = \alpha$ is flat in frequency f.
- The *phase response* $\angle C(f) = -2\pi f t_o$ is linear in frequency f.

[0]©2013, Georgia Institute of Technology (lect1_10)

Mathematical Channel Models

Two-Ray Multi-path Channel:

Suppose $r(t) = \alpha s(t) + \beta s(t-\tau)$.

Since $r(t) = s(t) * c(t)$, we have $c(t) = \alpha\delta(t) + \beta\delta(t-\tau)$.

Hence $C(f) = \alpha + \beta e^{-j2\pi f\tau}$.

Using $|C(f)|^2 = C(f)C^*(f)$, we can obtain

$$|C(f)| = \sqrt{\alpha^2 + \beta^2 + 2\alpha\beta\cos(2\pi f\tau)}$$

Using the Euler identity, $e^{j\theta} = \cos(\theta) + j\sin(\theta)$ in $C(f)$ above, we can obtain

$$\angle(C(f) = -\text{Tan}^{-1}\frac{\beta\sin(2\pi f\tau)}{\alpha + \beta\cos(2\pi f\tau)}$$


[0]©2013, Georgia Institute of Technology (lect1_11)


Mathematical Channel Models

Two-Ray Multi-path Channel:

Suppose $\alpha = \beta = 1$. Then

$$\begin{aligned} |C(f)| &= \sqrt{2 + 2\cos(2\pi f\tau)} \\ \angle C(f) &= -\mathrm{Tan}^{-1}\frac{\sin(2\pi f\tau)}{1 + \cos(2\pi f\tau)} \end{aligned}$$

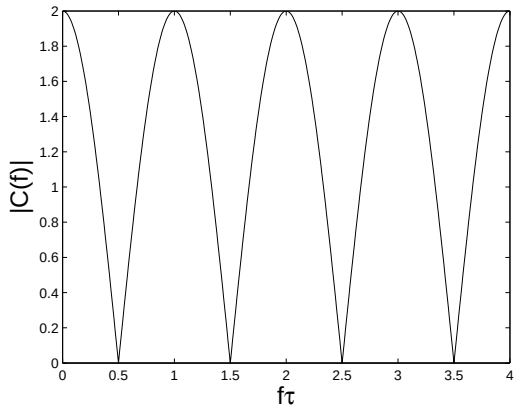

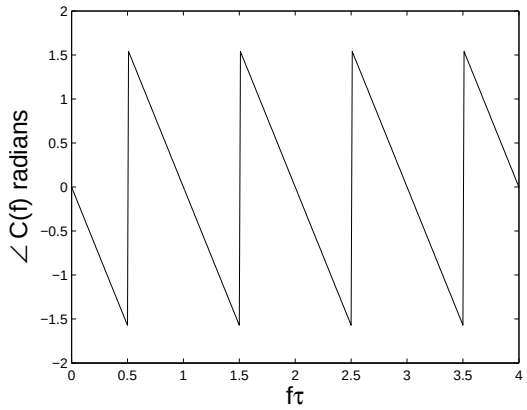

Observe that the multi-path channel is *frequency selective*.

[0]©2013, Georgia Institute of Technology (lect1_12)

Mathematical Channel Models

Two-Ray Fading Channel:

Suppose we transmit $s(t) = \cos(2\pi f_o t)$ and the received waveform is $r(t) = \alpha \cos(2\pi f_o t) + \beta \cos(2\pi(f_o + f_d)t)$, where f_d is a "Doppler" shift.

Assuming 2-D radio propagation, the Doppler shift is given by $f_d = (v/\lambda_o)\cos(\theta)$, where v is velocity, λ_o is the carrier wavelength, θ is the angle of arrival of the wavefront at the receiver. Note that $c = f_o \lambda_o$, where c is the speed of light.

Using the complex phaser representation of sinusoids, we can write

$$r(t) = A(t)\cos(2\pi f_o t + \phi(t))$$

where

$$\begin{aligned} A(t) &= \sqrt{\alpha^2 + \beta^2 + 2\alpha\beta\cos(2\pi f_d t)} \\ \phi(t) &= -\mathrm{Tan}^{-1}\frac{\beta\sin(2\pi f_d t)}{\alpha + \beta\cos(2\pi f_d t)} \end{aligned}$$


[0]©2013, Georgia Institute of Technology (lect1_13)

Mathematical Channel Models

Two-Ray Fading Channel:

Suppose $\alpha = \beta = 1$. Then

$$\begin{aligned} A(t) &= \sqrt{2 + 2\cos(2\pi f_d t)} \\ \phi(t) &= -\mathrm{Tan}^{-1}\frac{\sin(2\pi f_d t)}{1 + \cos(2\pi f_d t)} \end{aligned}$$

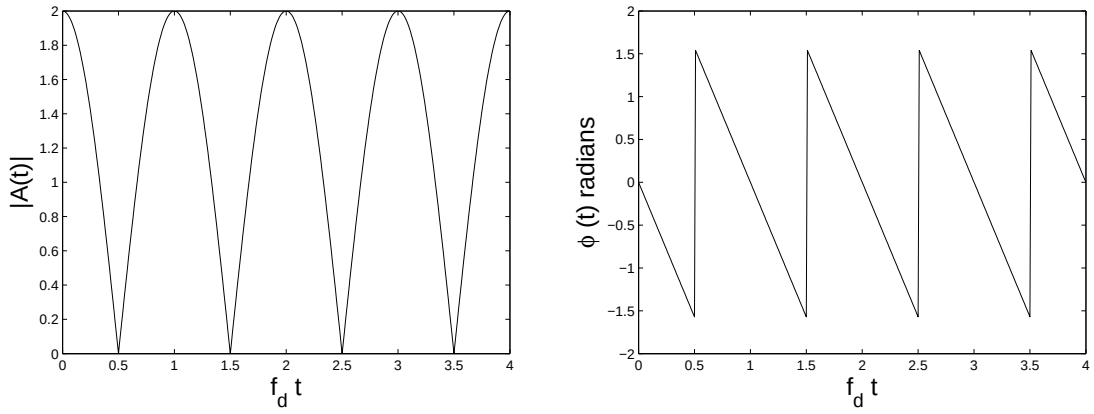

Observe that the fading channel is *time varying*.

[0]©2013, Georgia Institute of Technology (lect1_14)

Shannon Capacity of a Channel

Claude Shannon in his paper "A Mathematical Theory of Communication" BSTJ, 1948, proved that every physical channel has a **capacity**, C, defined as the maximum possible rate that information can be transmitted over the channel with an **arbitrary reliability**.

Arbitrary reliability means that the probability of information bit error or bit error rate (BER) can be made as small as desired without increasing the transmitted power.

Conversely, information cannot be transmitted reliably over a channel at any rate greater than the channel capacity, C. The BER goes to 1/2.

The channel capacity depends on the channel impulse response or channel transfer function, and the received bit energy-to-noise ratio (E_b/N_o).

Arbitrary reliability can be realized in practice by using error control coding techniques.

[0]©2013, Georgia Institute of Technology (lect1_15)


Coding Channel and Capacity

The channel capacity depends only on the *coding channel*, defined as the portion of the communication system that is "seen" by the coding system.

The input to the coding channel is the output of the channel encoder.


The output of the coding channel is the input to the channel decoder.


In practice, the coding channel inputs are often chosen from a *digital modulation alphabet*, while the coding channel outputs are continuous valued decision variables generated by sampling the corresponding *matched filter outputs* in the receiver.

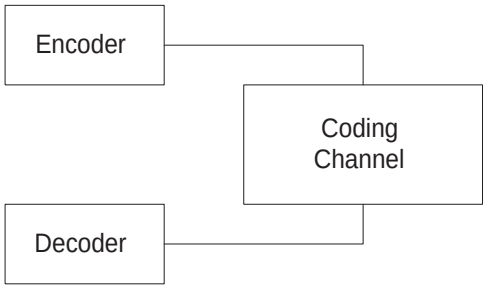

[0]©2013, Georgia Institute of Technology (lect1_16)

AWGN Channel Capacity

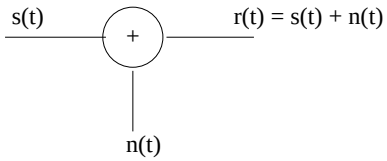

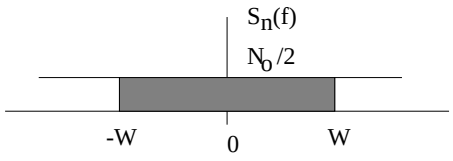

For the AWGN channel, the channel capacity is

$$C = W\log_2\left(1 + \frac{P}{N_o W}\right)$$

W = channel bandwidth (Hz)

P = constrained input signal power (watts)

N_o = one-sided noise power spectral density (watts/Hz)

$N_o/2$ = two-sided noise power spectral density (watts/Hz)

[0]©2013, Georgia Institute of Technology (lect1_17)

Capacity of the AWGN Channel

Divide both sides by W

$$\frac{C}{W} = \log_2\left(1+\frac{P}{N_oW}\right) = \log_2\left(1+\frac{E_b}{N_o}\cdot\frac{R}{W}\right)$$

$$\begin{aligned} R &= 1/T = \text{data rate (bits/second)} \\ E_b &= \text{energy per data bit (Joules)} = PT \\ E_b/N_o &= \text{received bit energy-to-noise spectral density ratio (dimensionless)} \\ R/W &= \text{bandwidth efficiency (bits/s/Hz)} \end{aligned}$$

If $R = C$, i.e., we transmit at a rate equal to the channel capacity, then


$$\frac{C}{W} = \log_2\left(1+\frac{E_b}{N_o}\cdot\frac{C}{W}\right)$$

or inverting this equation we get E_b/N_o in terms of C, viz.

$$\frac{E_b}{N_o} = \frac{2^{C/W}-1}{C/W}$$

[0]©2013, Georgia Institute of Technology (lect1_18)

AWGN Channel Capacity

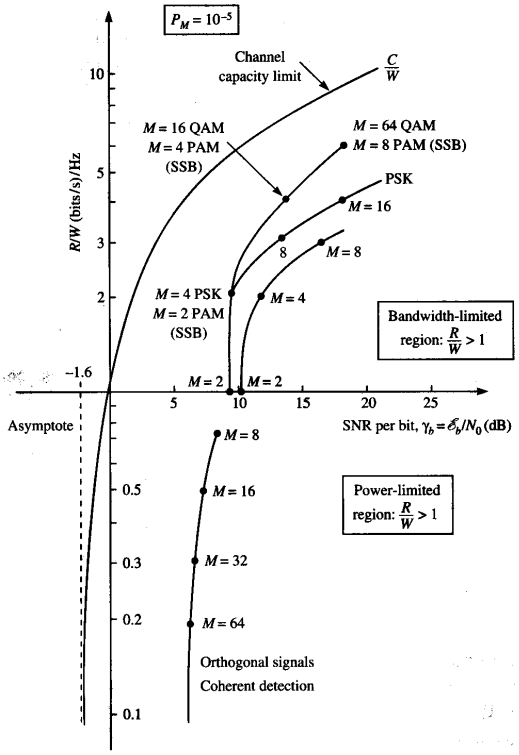

[0]©2013, Georgia Institute of Technology (lect1_19)

Capacity of the AWGN Channel

Example: Suppose that $W = 6$ MHz (TV channel bandwidth) and the received SNR $\triangleq P/(N_oW) = 20$ dB. What is the channel capacity?
Answer: $C = (6 \times 10^6)\log_2(1 + 100) = 40$ Mbps. It is impossible to transmit information reliably on this channel with a rate greater than 40 Mbps.

Asymptotic behavior: as $C/W \to 0$.
Using L'Hôpital's rule

$$\begin{aligned} \lim_{C/W \to 0} \frac{E_b}{N_o} &= \lim_{C/W \to 0} 2^{C/W} \ln 2 \\ &= \ln 2 \\ &= 0.693 \\ &= -1.6\text{dB} \end{aligned}$$

Conclusion: It is impossible to communicate on an AWGN channel with arbitrary reliability if $E_b/N_o < -1.6$ dB, regardless of how much bandwidth we use.

[0]©2013, Georgia Institute of Technology (lect1_20)

AWGN Channel Capacity

Power Efficient Region: $R/W < 1$ bits/s/Hz. In this region we have bandwidth resources available, but transmit power is limited, e.g., deep space communications.

Bandwidth Efficient Region: $R/W > 1$ bits/s/Hz. In this region we have power resources available, but bandwidth is limited, e.g., commercial wireless communications. *Note: we still want to use power efficiently, i.e., bandwidth and power efficient communication*


Observe that most uncoded modulation schemes operate about 10 dB from the Shannon capacity limit for an error rate of 10^{-5}.

State-of-the-art "turbo" coding schemes can close this gap to less than 1 dB, with the cost of additional receiver *processing complexity* and *delay*.

Generally, we can tradeoff *power*, *bandwidth*, *processing complexity*, *delay*.

[0]©2013, Georgia Institute of Technology (lect1_21)

What is SNR?

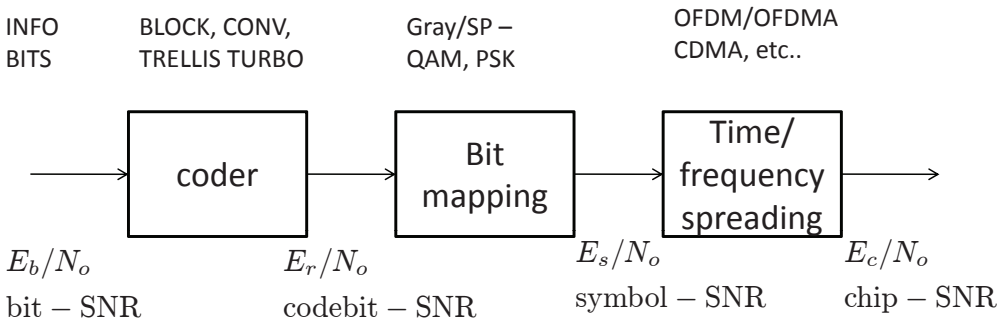

E_b = energy per information bit

E_r = energy per code bit

E_s = energy per modulated symbol

E_c = energy per spreading chip

The term signal-to-noise ratio (SNR) used by itself is vague: It could mean Bit-SNR, Code-bit-SNR, Symbol-SNR, Chip-SNR.

We always need to compare different systems on the basis of received Bit-SNR, E_b/N_o.

[0]©2013, Georgia Institute of Technology (lect1_22)